



## LIGHT BROTHER POWER SOLUTION

Plot no-116, Near Tata Pasco Showroom, Narsinghpur, Gurgaon – 122004 (Haryana) India

Email: lbpsindia01@gmail.com

### General Catalogue of Thawing Machine (Solder Paste Normalization Machine)



Picture-1\_During Normalization Process



Picture-2\_After Normalization Process

### User interface of Thawing Machine:

1. Connect the adaptor in Mains Supply 230VAC  $\pm$  10% and Mains Switch ON then show display as below:






## LIGHT BROTHER POWER SOLUTION

Plot no-116, Near Tata Pasco Showroom, Narsinghpur, Gurgaon – 122004 (Haryana) India

Email: lbpsindia01@gmail.com

### General Catalogue of Thawing Machine (Solder Paste Normalization Machine)

2. If You want change password or Set Timer value then press switch MENU then show display as below and enter default password by switch UP/DOWN.

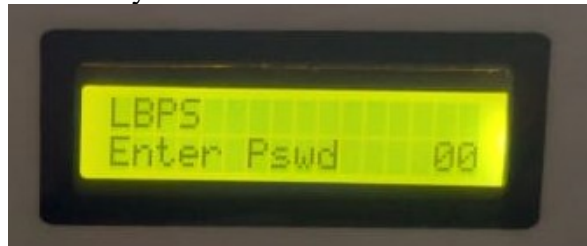


3. Then enter switch ENT, if password is ok and show display as below:



4. Press Switch ENT then show display as below:



5. you want change Password Setup Then Press Switch UP and show display as below:

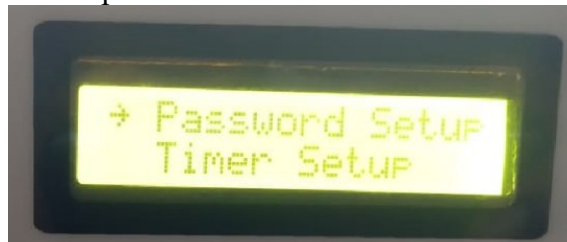

6. Press ENT switch and show display as below:





## LIGHT BROTHER POWER SOLUTION

Plot no-116, Near Tata Pasco Showroom, Narsinghpur, Gurgaon – 122004 (Haryana) India

Email: lbpsindia01@gmail.com


---

### General Catalogue of Thawing Machine (Solder Paste Normalization Machine)

7. Then we can change Password (00 to 255) by press switch UP/DOWN after change password, press switch ENT then display show as below:




8. If You want change Timer Setup value then press switch MENU then show display as below: and enter default password by switch UP/DOWN.If you want change Timer Setup Then Press Switch UP and show display as below:

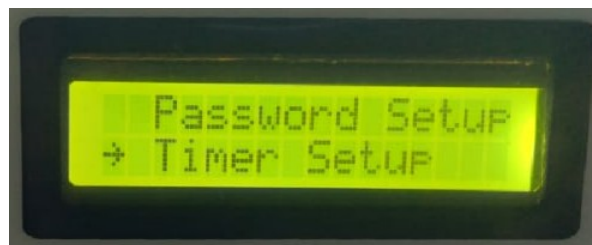

9. If you want change Timer Setup value Then select Timer setup by switch UP/DOWN and show display as below:



10. If you want change Timer Setup Hour value Then select Hour value by switch UP/DOWN then press switch ENT and show display as below:

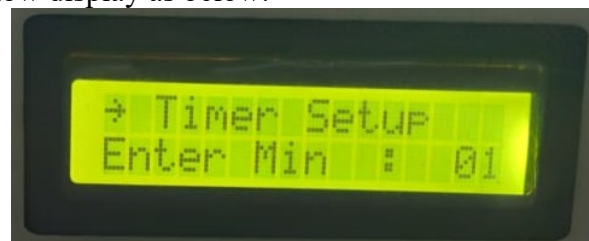



## LIGHT BROTHER POWER SOLUTION

Plot no-116, Near Tata Pasco Showroom, Narsinghpur, Gurgaon – 122004 (Haryana) India

Email: lbpsindia01@gmail.com

---

### General Catalogue of Thawing Machine (Solder Paste Normalization Machine)

11. If you want change Timer Setup Minute value Then select Minute value by switch UP/DOWN then press switch ENT and show display as below:



12. If open the Door of Thawing Machine then Green led indicator will be ON and show display as above.
13. If close the Door of Thawing Machine then Green led indicator will be OFF and show display as below:

